 
 
 
 



.....	5
.....	6
.....	7
.....	8
.....	18
.....	28
.....	28

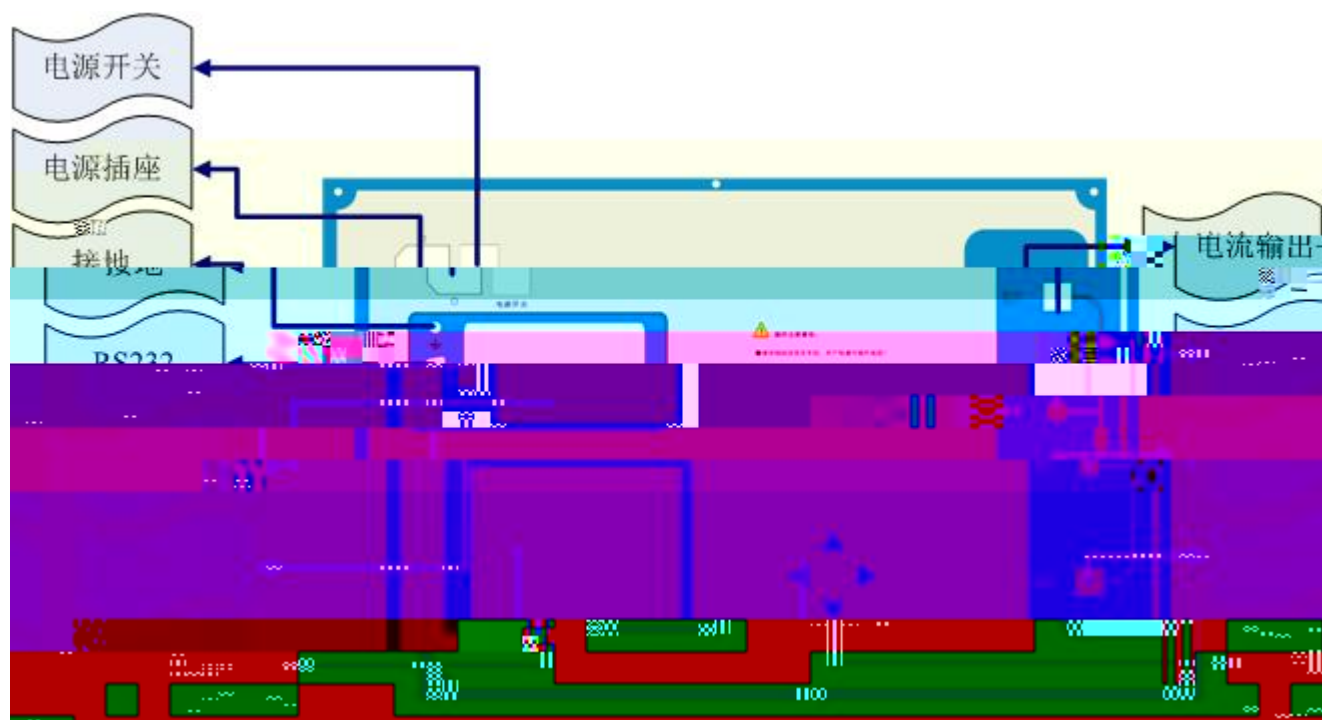

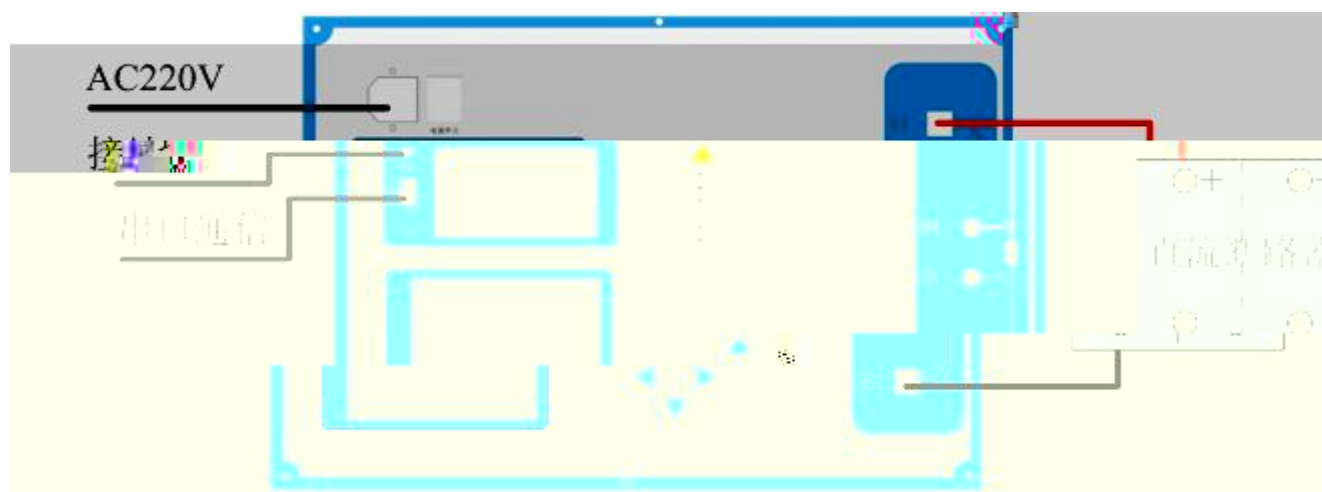



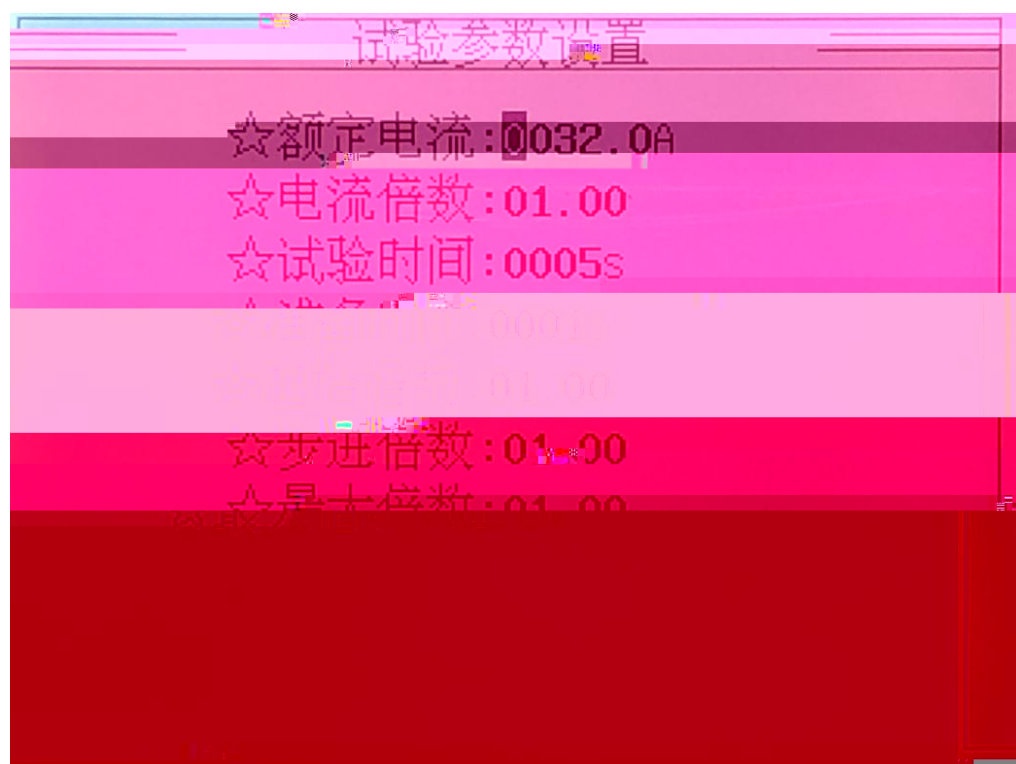

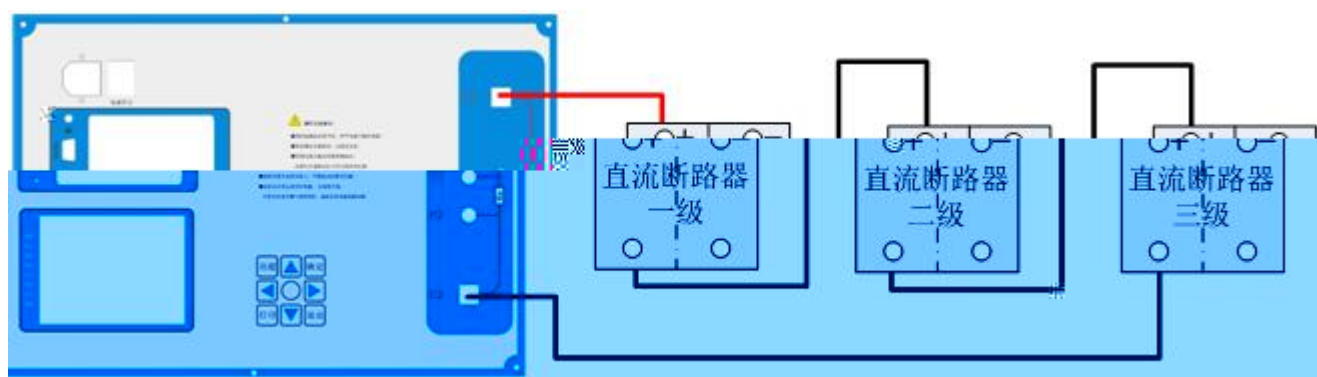 



功能管理界面

系统日历时钟调整

清除警告

试验操作注意事项

 


Ê ,ô# ñ0 Q 2 U1^0 ,ñ"Ñ™à


È

Ä

f

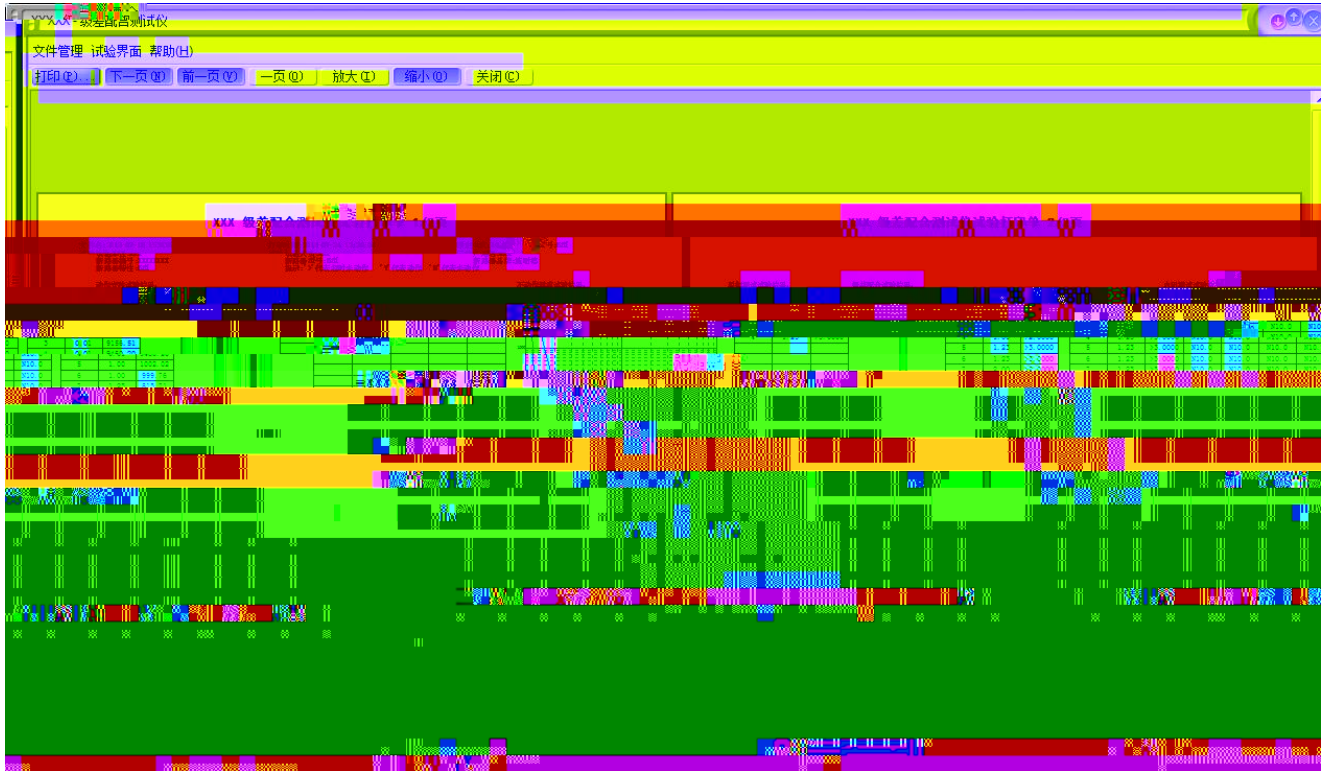

22

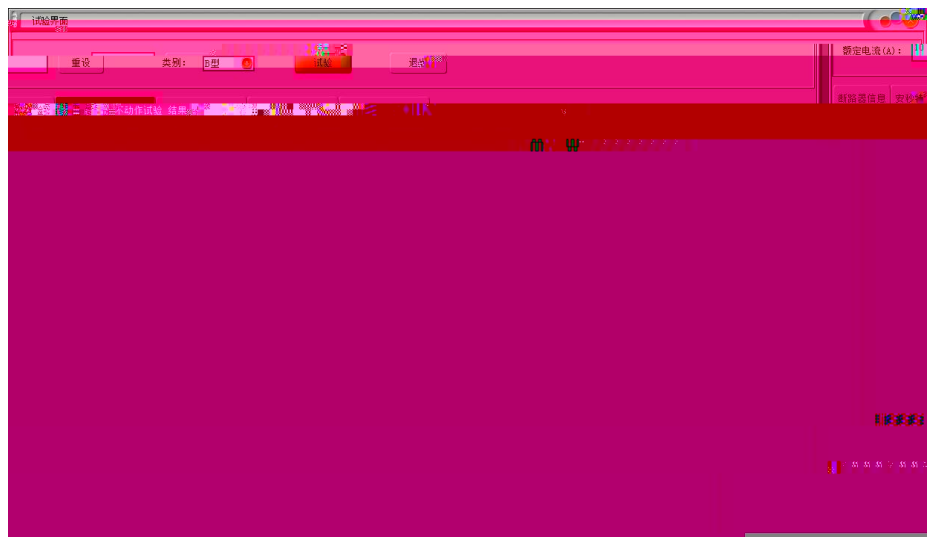 



试验

基本设置

试验类型：

内阻测试试验

电流倍数：

2

试验时间(S)：

3

准备时间(S)：

8

逐级升流试验：脱扣测试试验设置

起始电流(A)：

10

转换倍数：

1

步进电流(A)：

5

转换倍数：

1

最大电流(A)：

500

转换倍数：

50

试验操作

串口5

提示：

试验前，请将空开合闸！

[上传本试验所有数据]

命令：以不用，将重

和时，请耐心等待！

连接仪器测试

清除

26

